


ILIFE-W150

Cordless Handheld Floor Washing Cleaner

User Manual

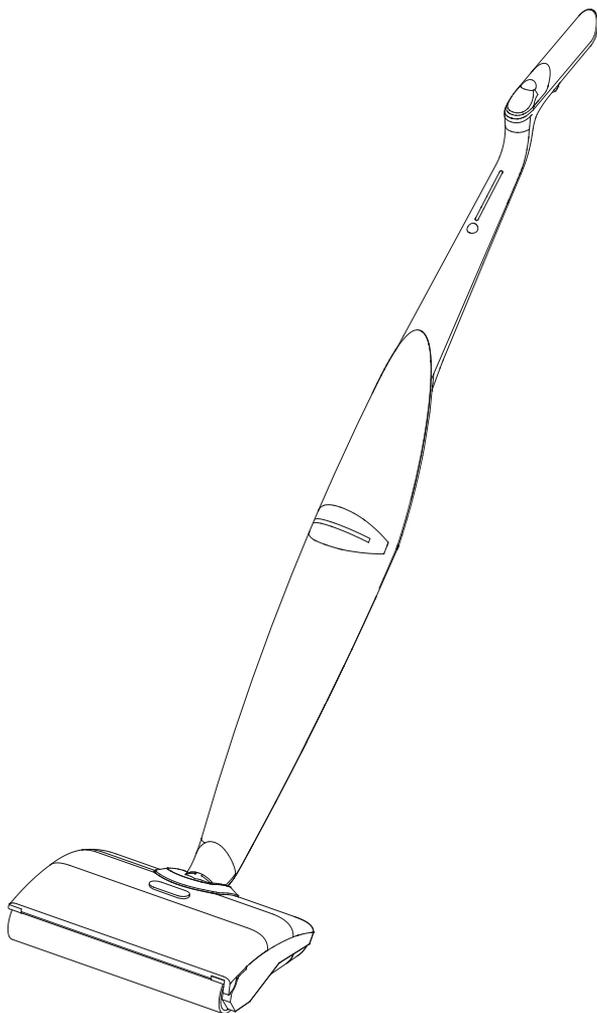

For more detailed information,
please visit: www.iliferobot.com | **ILIFE**

Dear Customer,

Thank you for purchasing ILIFE W150 Cordless Handheld Floor Washing Cleaner!

You've joined the millions of people who clean with robots - the smarter way to get it done.

Please take a few moments to read this manual and get acquainted with your robot, to get the best performance from your robot. If you have any problems with your robot please do not hesitate to contact our customer service or visit our website at www.iliferobot.com for more information.

Stay connected with us on Facebook and twitter to enjoy these exclusive benefits:

- Get support tailored to your specific robot, including answers to questions, maintenance tips, video demos, live chat and more.
- Get product updates and other valuable information among the first to find out about new robots, exclusive discounts and special promotions.

Connect with us right now at

Facebook: facebook.com/iliferobotics

Twitter: twitter.com/ILIFEROBOTICS

Enjoy a thorough cleaning every day!

Best regards,

ILIFE Innovation

ILIFE Customer Service



1-800-631-9676(Toll free for North America)

Mon-Fri: 8:00 am - 7:00 pm CST



service_us_ca@iliferobot.com

Table of Contents

Safety Instructions	3
Product Introduction	5
List of Accessories	5
Introduction of Robot	6
Button Explanation	7
Light Effect Prompt	7
Voice Prompt	8
Product Operation	9
Assembly	9
Assemble the Roller	9
Install the Charging Base	10
Charge	10
Install the Clean Water Tank	11
Take the Roller Out	11
Auto-cleaning of Roller	12
Lock and Unlock	12
Clean the Floor	13
Maintenance	14
Clean the Roller	14
Clean the Dirty Water Tank and Channel	15
Moving and Storage	18
Active Protection System	18
Troubleshooting	19
Product Specification	20

Safety Instructions

Warnings

1. This floor washing cleaner is a household product, and is not recommended for use in industrial, commercial or other severely dirty conditions.
2. To prevent project damage, please use the accompanying detergent if needed.
3. In order to prevent damage to the roller sponge, please do not clean sharp objects with this product.
4. Please do not use the floor scrubber to clean cement, gypsum powder, wall powder, other small particles that solidify easily, or large objects such as toys or spitball. Otherwise, the scrubber may suffer from blockage, motor burn, or other failures.
5. Please do not clean flammable or explosive materials with the floor scrubber or put these types of liquids in the water tank.
6. If the roller rolls wire or similar objects in while operating, please turn it off immediately and remove the wire to prevent damage to the machine.
7. Please do not tilt or invert the floor scrubber. Clean the dirty water tank after usage.
8. Please fully charge the machine before the first use or not using after a long time.
9. If there is a long time for not using, please charge it at least every three months.
10. Use a dry mop to wipe the floor scrubber instead of gasoline, cleansers, or other corrosive detergents to avoid the case cracking, fading etc.
11. Please do not let children to use or play with the floor scrubber.
12. If the floor scrubber is fully charged but unable to work, you must send it to a designated repairing shop for testing and repair. Do not disassemble.
13. The battery needs to be safely recycled. Do not discard by yourself.
14. In order to avoid danger, if the charging cable is damaged please visit the manufacturer's local repair department or similar department for professional replacement.
15. Please use the original adaptor.

Safety Instructions


Service restrictions

This product is designed for usage on Restrictions of Using only (such as tile, marble, wood, waterproof hard floors etc.). Please do not use the product to clean rugs or other non-waterproof floors.







Note:

This product is not suitable for rug or carpet cleaning.

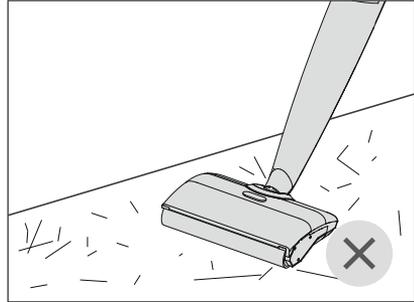

- To avoid electrocution, please do not press on the power cord while using the machine.
- Make sure any parts of the body or large objects such as clothes, etc. is far away from the roller.

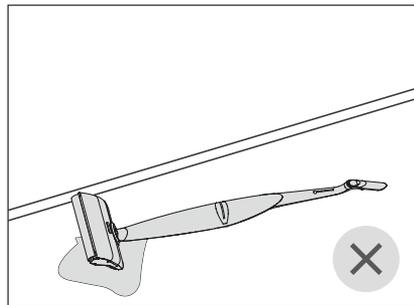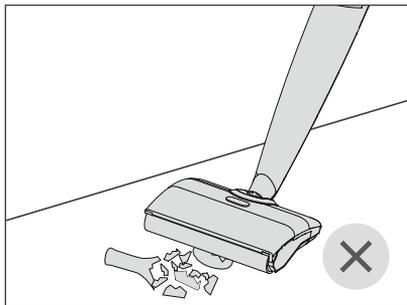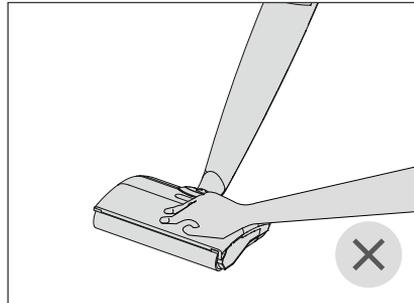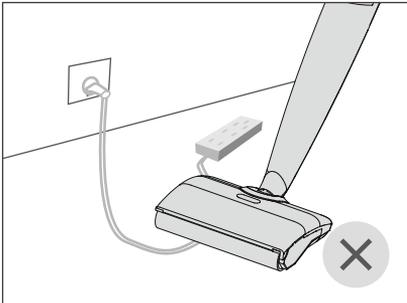


Product Introduction


List of Accessories



 Handlebar




Dirty Water Tank

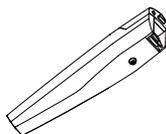

Clean Water Tank



Cleanser

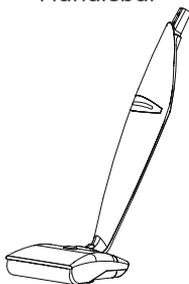

Main Body



Dock



Charging Base



Roller



Cleaning Tool



Power Adaptor



User Manual



Bolt




Rubber Plug 1 X2



Rubber Plug 2 X2

Product Introduction


Introduction of Robot

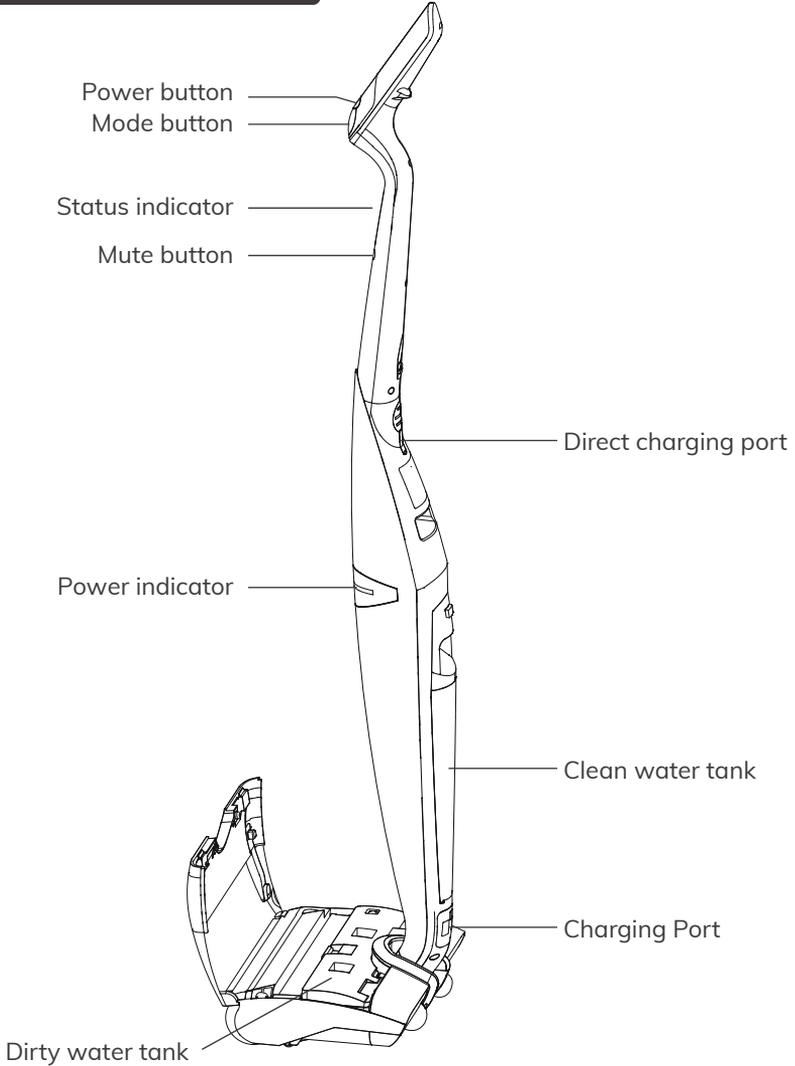

Product Introduction

Button Explanation


- 1 **Turn on/ off:** Push the power button gently to turn on the machine. Push it again to turn the machine off.
- 2 **No-Water Sweeping Mode:** Hold the power button for 3 seconds. After hearing "Tick", please loose your hand from the button and the machine will begin with "Sweeping Mode" (not using the water pump).
- 3 **MAX Mode:** When the product is working normally, push the mode button gently to switch the machine to MAX sweeping mode. You can also switch between modes repeatedly.
- 4 **Self-Cleaning Mode:** Push the mode button gently to enter auto-cleaning mode when the product is on the charging base.
- 5 **Quiet Mode:** Press the voice button after startup to turn the voice off. You can switch between modes repeatedly.

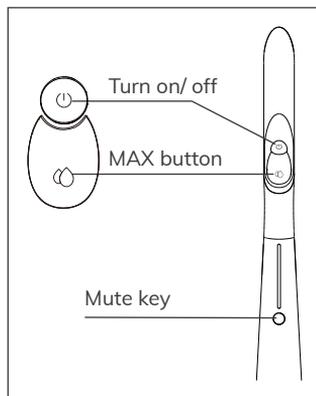

Light Effect Prompt

Indicator light For working	Product status	Light status
 <p>Indicator light of working status</p>	Working	The light is constantly on
	High battery	Green light
	Low battery	Red or yellow light
	Working error (incl. the dirty water tank is not installed or the clean water tank or roller alarm has a problem)	A fast blinking red light

Product Introduction

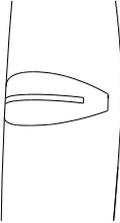Indicator light for working	Product status	Light status
	Charging	The orange light blinks
	Charging completed	The status indicator is off
	Working error (incl. the dirty water tank is not installed or the clean water tank or roller alarm has a problem)	A fast blinking red light



Voice Prompt

Default voice content	Condition for voice activation
Tick	Button Response
Tong	Off mode
Start cleaning	Starting the machine
Please return to base for auto-cleaning	The machine is not on the charging base when self-cleaning
Start charging	Entering charging mode
Low battery	The battery is low
Please check the clean water tank	The clean water tank is not installed or is empty
Please clean the dirty water tank	The dirty water tank is full
Please install the dirty water tank	The dirty water tank is not installed
Please check the roller brush	The roller brush is blocked by foreign matter
Start auto-cleaning. Please wait	Push the mode key quickly after the machine is correctly put on the charging base and enters charging mode
Turn voice on	Push the voice key to turn the voice on
Turn voice off	Push the voice key to turn the voice off


Product Operation

Assembly

- 1 Open the package and take out all the product accessories. Mount the handle on the machine and tighten the screws.

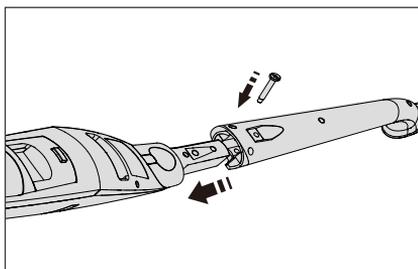
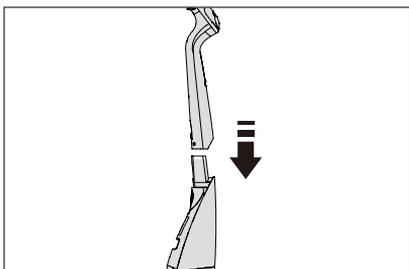


- 2 Take out the roller. If it is dry and stiff, please soak it in water (under 50 °C) and rub it evenly till it is completely soft. Then take it out of the water and squeeze any extra water out until it stops dripping.

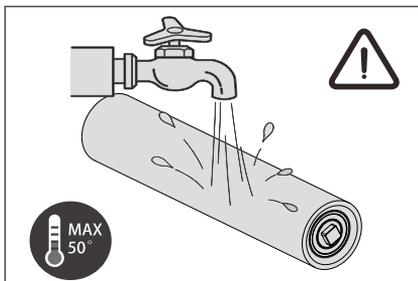

Assemble the Roller


- 1 Put the roller into the machine from its side.

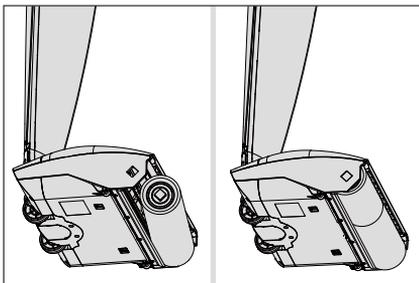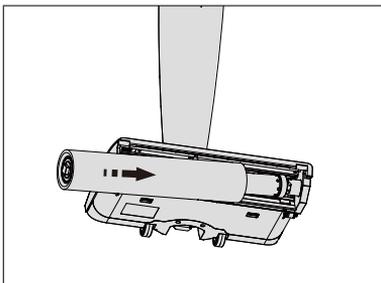

Product Operation

Install the Charging Base



- 1 Take the charging base component out from the package. Insert the plug of the charging base into the socket.

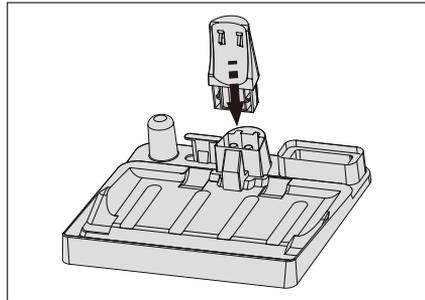



Charge

The orange light blinks during charging. The green light is on for 30s after charging. The light is on for 5s after the charging is interrupted.

Option1: Insert the power adaptor directly into the charging port.

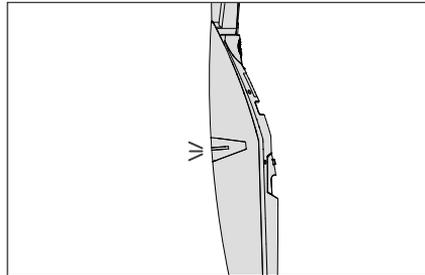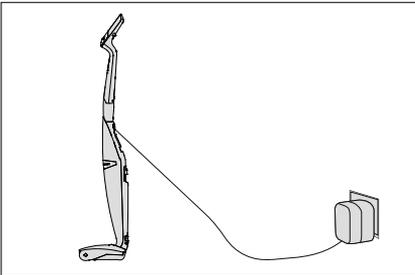


Option2: Place the main body on the charging base, and connect to the socket for charging.

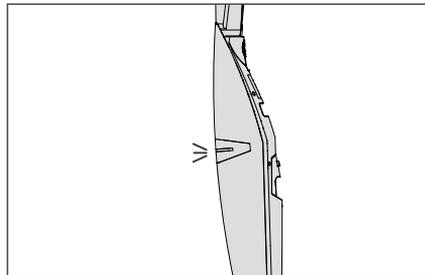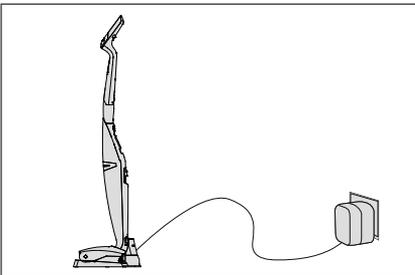


Product Operation

Install the Clean Water Tank

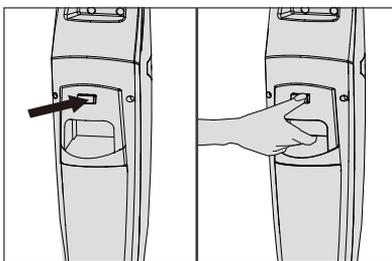





- 1 Please fill the clean water tank before using the product. Hold the square button on the top of the water tank to unlock it and put your hand on the latch to pull the water tank out.

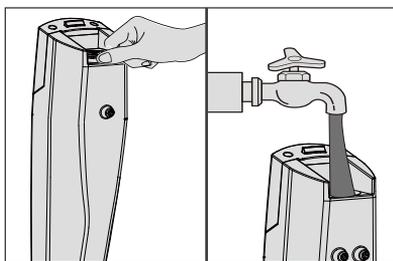

- 2 To prevent it tilting, please grab the main body with your other hand to keep it upright.

Take the Roller Out



- 1 Press the roller button on the side of the mop and take the roller out after it pops out from one side.

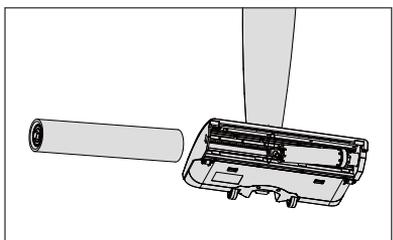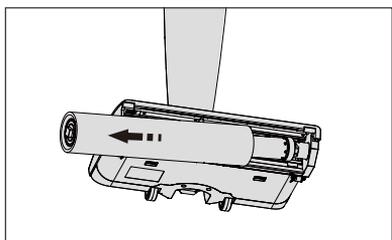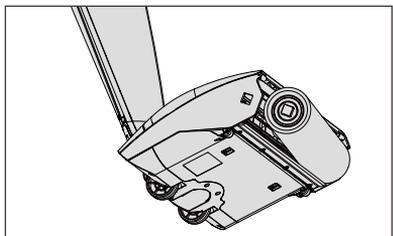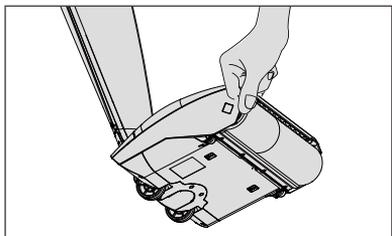

Product Operation

Auto-cleaning of Roller

Put the main body on the charging base and quickly press the mode button for the roller to work automatically.

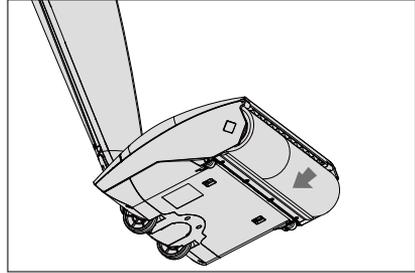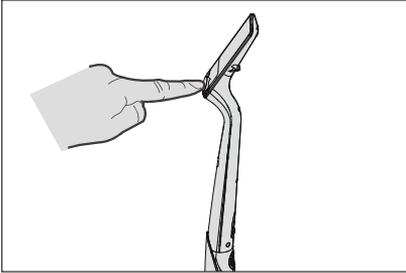

Lock and Unlock


Lock the main body

Push the lower part of the main body forward slightly until you hear a “click” which indicates the main body is locked in place.



Note:


Do not push the main body forward after it is locked. Otherwise, the product might be damaged.

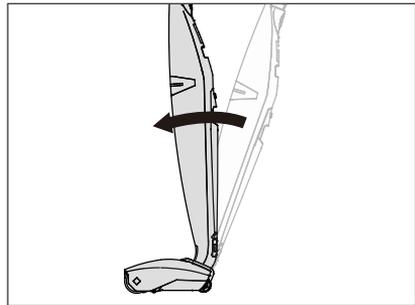


Product Operation

Unlock the main body


Lift the product from the base and put it on the flat floor. Hold the handle and stabilize the mop with one foot. Then pull the main body backward gently until you hear a “click”, which indicates the main body is unlocked.

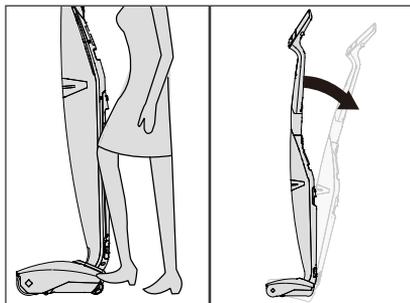

Clean the Floor

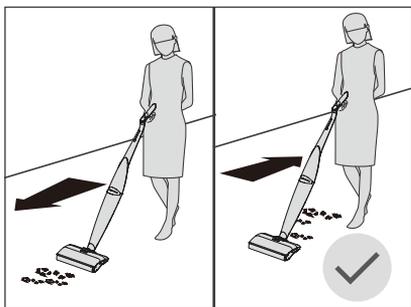



The product cleans forward or backward.

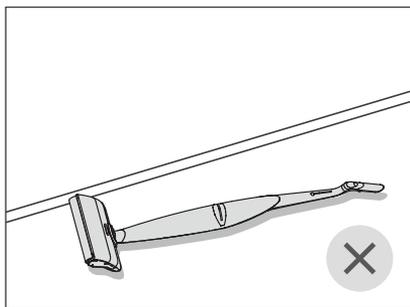

Do not lay the product down on the floor.

Maintenance

Clean the Roller

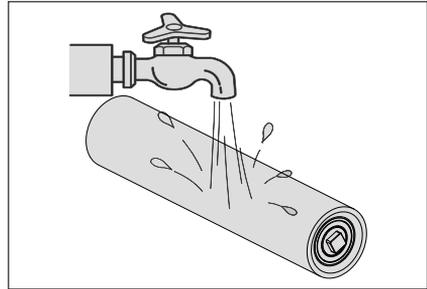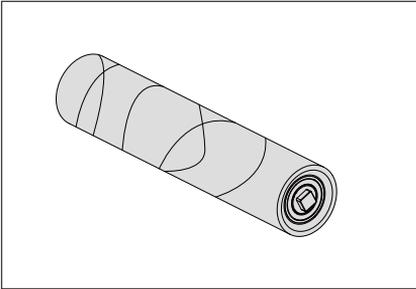

- 1 First remove any entangled hairs before cleaning the roller.
- 2 Clean the sponge roller (use the correct amount of soft detergent).



Note:


The active protection system is used to identify any malfunction during operation. When the system is activated, the product will immediately stop working to prevent damage. **If you want it to resume working, please follow the following instructions:** Active protection mechanism of the cleaning roller: if the cleaning roller is stuck, the main body will play the corresponding voice prompt: **"Please check the roller brush !"**.

- 1 Open the cover of the cleaning head and remove the stuck object.
- 2 If the stuck object is hard to find, please disassemble the cleaning roller to look better.
- 3 After the stuck object is removed, mount the cleaning roller back on the mop and restart the product.


Maintenance

Clean the Dirty Water Tank and Channel


Clean the dirty water tank

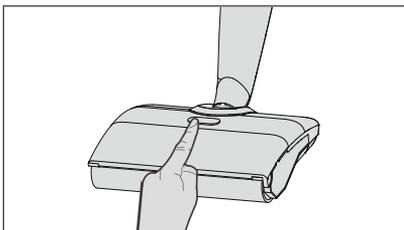


1 Push the button to open the cover.

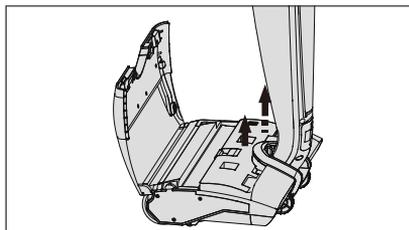


2 Put your hand on the slot of the dirty water tank to remove it.

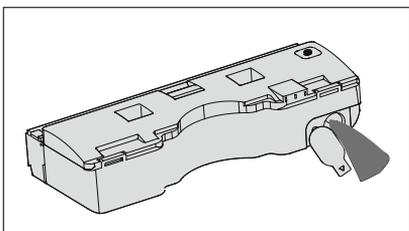


3 Open the cover on the side to pour out the dirty water.

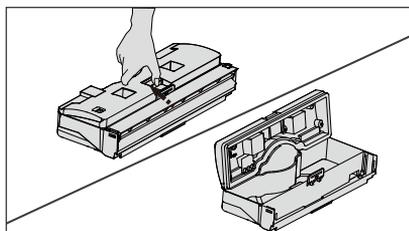

4 Or push the latch on the dirty water tank to open it.

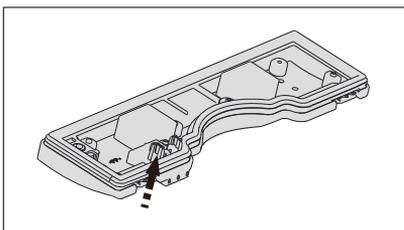


5 Please wipe the sensor sheet with a soft cloth regularly to maintain the water full alarm.

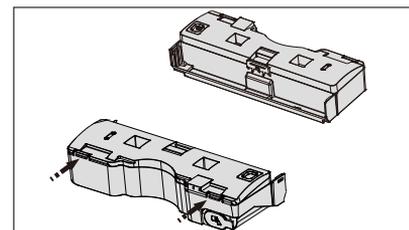


6 The snaps on both sides need to be installed in place.

Maintenance

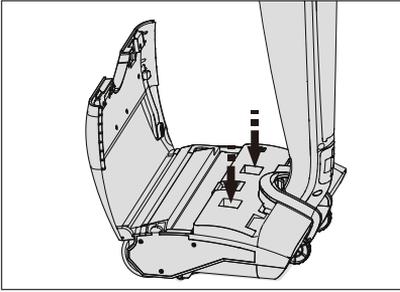

- 7 After the dirty water is dumped out, put the tank back into the mop.

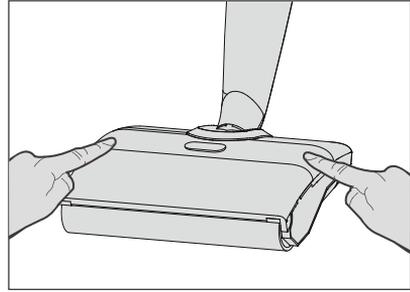

- 8 The top cover needs to be covered flat.





Note:



Please grab the dirty water tank with your other hand to keep it steady and prevent spilling.

Clean the channel


Push the button to open the cover. Take out the filter flexible glue or dirty water channel flexible glue, rinse it with clean water and mount it again.

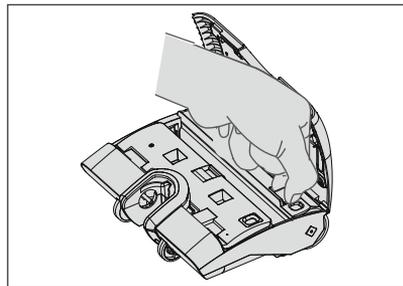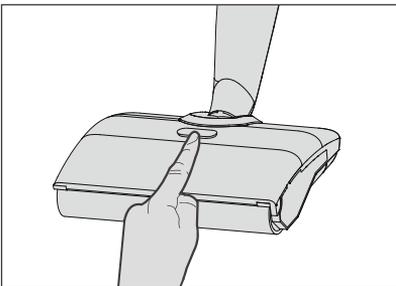

Maintenance

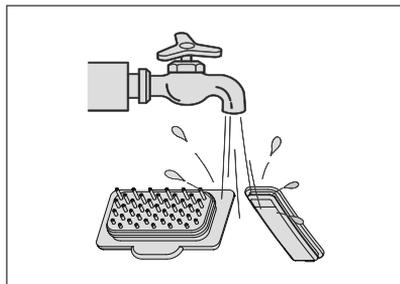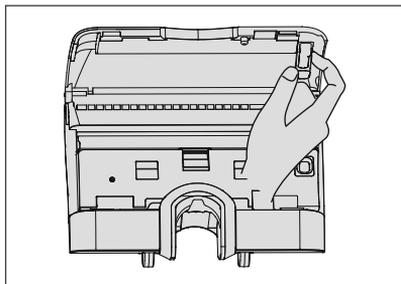


The dirty water hole should be cleansed immediately if it spills during operation. The rubber cover may be removed to clean foreign matter if the channel is blocked.

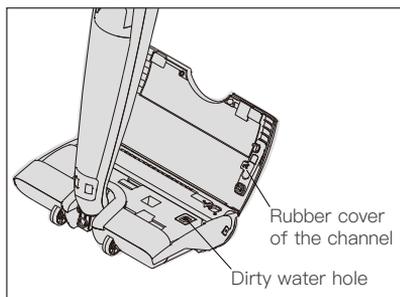

Note:

Please disconnect the power adaptor to stop charging before maintaining or cleaning the product. Please clean the exterior of the main body regularly with a soft wet cloth. Do not use wire ball or other rigid cleaning tools or corrosive detergent to wipe the main body to avoid scratching or damaging the product.

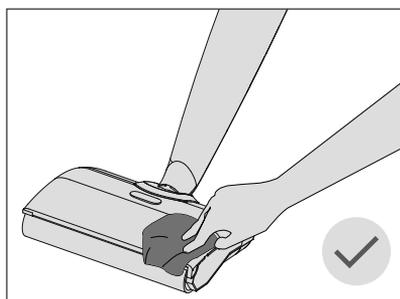

Maintenance

Moving and Storage

Store the product

- 1 Please turn off the machine before storage. Lock the main body and put it back on the base.
- 2 Please cleanse the interior of cleaning head before storage to prevent bacteria and make sure the clean water/dirty water tank is completely emptied.
- 3 If the product is stored for over 1 week, please disconnect the power adaptor, cleanse the cleaning roller, and leave it on the base for drying to avoid odor from mold or deformation from extrusion.

Moving the product

- 1 Please turn off and lock the machine.
- 2 To move the machine, tilt it backward and roll it using the wheels on the bottom.

**Note:**

Please do not drag the machine if there are sand or sharp objects on the floor, to avoid scratching.

Active Protection System

An active protection system is installed on the product, if any large object such as a towel, curtain, etc. gets stuck, the product will stop working and give a prompt to ensure safety.

Troubleshooting

Problem		Solution
Abnormal amount of water leaked on the floor.	1. The cleaning roller is not fully soaked.	Soak the roller in water till it is soft, and squeeze out any extrawater before installation.
	2. The cleaning roller is deformed or not installed correctly.	Check the installation button and the appearance of the cleaning roller to see if it is mislocated or deformed. If so, please reinstall or replace the cleaning roller.
	3. There are too many obstacles in the sewage channel.	Please remove any obstacle with tweezers or other tools.
	4. The top cover of the mop is not pushed in place.	Put the upper cover on again and make sure both sides are buckled in place.
	5. The dirty water tank inlet is blocked.	Clean the blockage in the dirty water tank inlet.
The product cannot start.	1. The battery is drained.	Charge the product and restart it.
	2. The handle is not connected correctly to the main body.	Reconnect it.
	3. Reset the system.	Hold the power button for 7s.
Dirty water tank alarm.	The dirty water tank is not installed in place.	Reinstall the dirty water tank.
No warning when the dust tank is full	The dust is embedded in the sensor of the dust tank.	Wipe the dust with a towel.
There is foam in the garbage box.	Other detergent was used or a non-standard amount of detergent was used.	Only use the dedicated detergent for this floor scrubber. Use of other uncertified detergents can damage the product. Likewise, please use the correct amount of detergent.

Product Specification

Item	Detail
Noise	< 65 dB
Clean Water Tank Capacity	1000ML
Dirty Water Tank Capacity	500ML
Lithium Battery Capacity	3200mAh
Rated Power	30W
Adaptor	19V = 0.6A
Working Voltage	14.4V
Charging Duration	< 360mins
Size	300x230x1220 mm

Register to Get 6 Months Free Extended Warranty

By joining, you could win



6 month free
extended warranty



Exclusive
coupons



Faster
service

How to join?

- 1 Visit: www.iliferobot.com
- 2 Go to **Support** Page
- 3 Click on “**Extend 6-Month Warranty**”

Share product image/video

Welcome to share ilife
product **image/video** and experience
on social media by tagging us
and using hashtag #cleanwithilife.
You'll have chance to get featured.

iliferobot 



welcome to follow us @iliferobotics